

Repair instruction

Description: Hob Pressing

Look for Service Centres, Point of Sale addresses and other information on: www.thetford.eu

Version:

Date:

May 2009

Tools required:

Flathead Screwdriver,


A

To remove the Hob pressing start by removing the glass lid as outlined in the "glass lid" work instruction and unclip the pan stand(s)




B

Once the lid has been removed loosen the screws holding each hinge in place and remove another 2 screws which can be found in the back panel

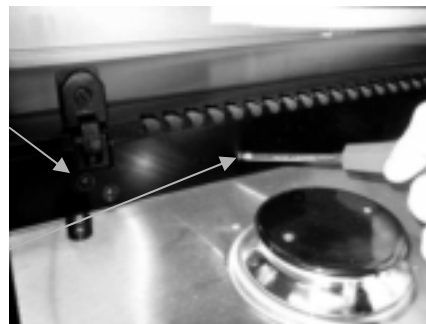

C

Remove the two screws holding each burner cap in place (if applicable)

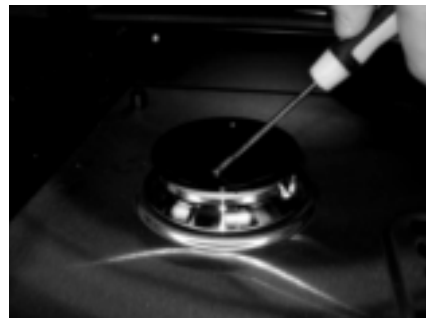

D

The burner spreader can now be lifted away from the pressing revealing the electrode and thermocouple



E

Using a 7mm socket screwdriver remove the 2 studs that hold the pressing to each burner cup



F

Remove each control knob by simply pulling it forward



G

Once the knobs have been removed revealing the tap spindles you will need to remove two 16mm nuts and 1 or 2 screws holding the fascia in place




H

Lift the fascia slightly and pull forward in order to remove it



I

Remove the plugs that are attached to the back of the electronic ignition if applicable. Locate the final two screws that face towards the front of the oven and remove

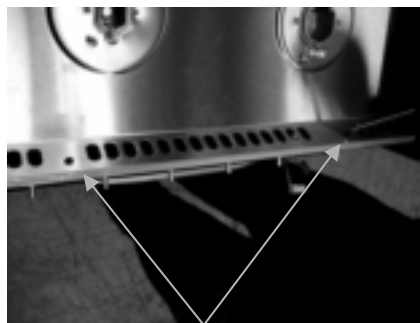

J

The pressing can now be removed by lifting from the front and sliding from under the back panel

To replace simply slide the back in first under the rear panel and line up the holes before rescrewing in place



K

Reconnect the electrode leads which are not polarity dependent, Replace the fascia and secure by replacing the screws and nuts originally removed




L

When replacing the burner studs take care not to over tighten as this can damage the pressing and or the enamel



M

Replace the burner spreaders and screw the burner caps back in place ensuring a nice level finish

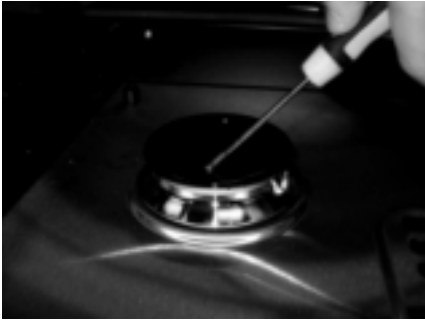

N

Replace the glass lid and pan stands

